


FinePix F10

Quickstart


FUJIFILM digital


Camera Controls

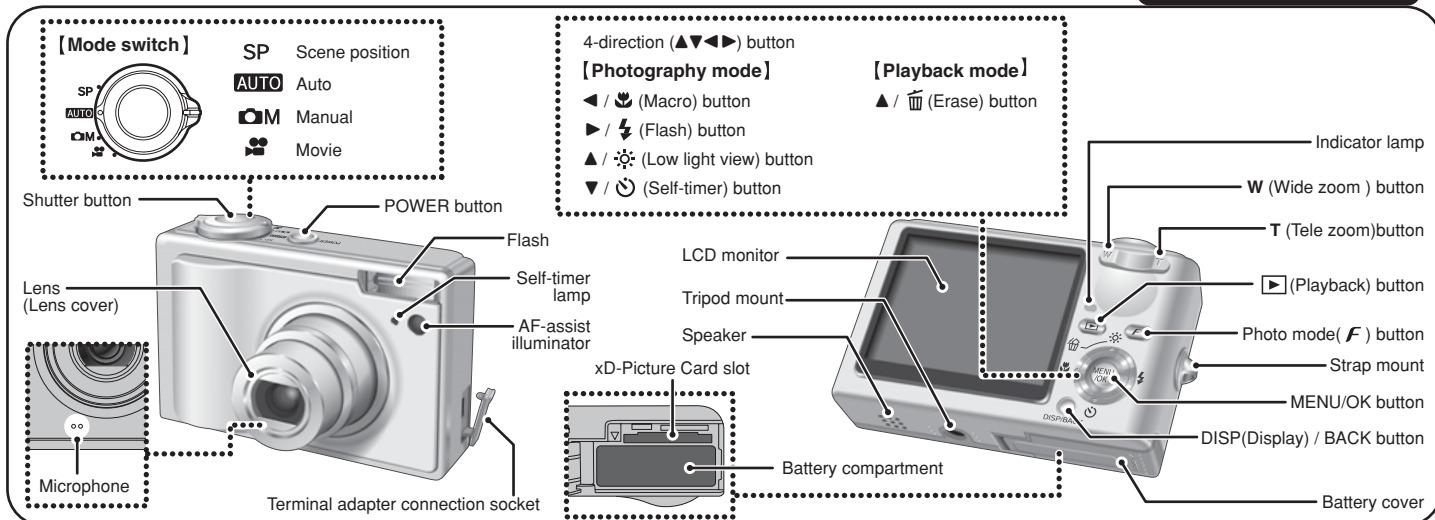

BL00465-200(1) E


Picture Taking

A. Loading the battery

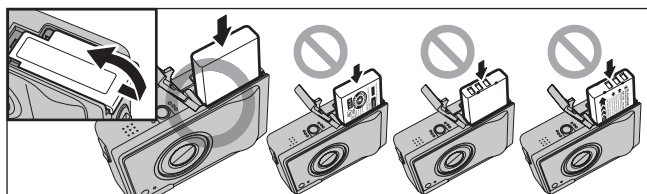


Hold the battery so that the indicators are aligned and load it.

B. Charging the battery

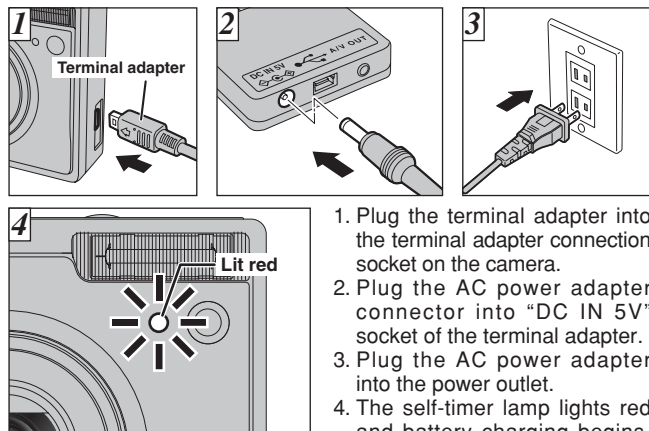


C. Setting up the camera

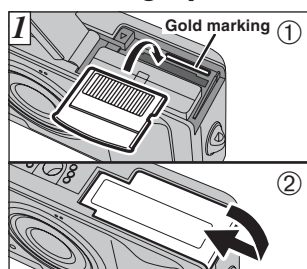


- Align the gold marking on the xD-Picture Card slot with the gold contact area on the xD-Picture Card™ and push the card firmly all the way into the slot.
- Close the battery cover.

Refer to Owner's Manual for more detailed instructions

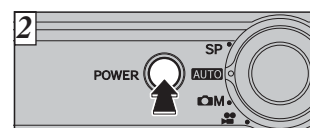


- Press the "POWER" button to turn the camera on.

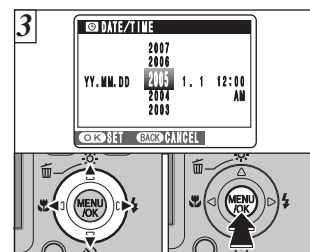


- You can select your preferred date format. Press "◀" or "▶" to select the date order, Year, Month, Day, Hour or Minute. Press "▲" or "▼" to correct the setting. Press the "MENU/OK" button after you complete the setting. *Refer to owner's manual for date/time setup.

D. Taking pictures

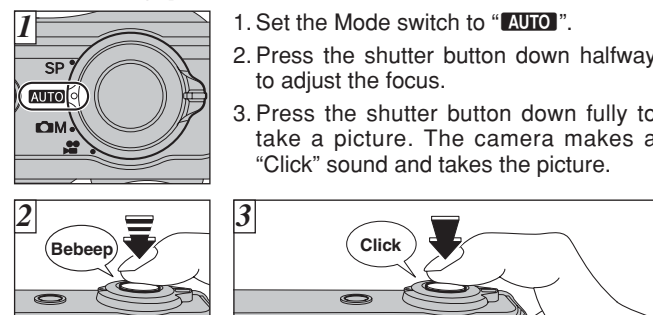

E. Viewing pictures

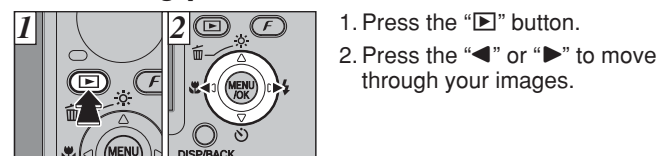

Still images that can be viewed on the FinePix F10

You can use this camera to view still images recorded on the FinePix F10 or still images (excluding some uncompressed images) recorded on a FUJIFILM digital camera that supports xD-Picture Card.

Viewing images on your PC



A. Install Software



B. Connect a Camera to PC

C. Save Images



A. Install Software

Do not connect the camera to your PC until the software installation is completed.


1. Turn on your PC and start up Windows.
Users of Windows 2000 Professional or Windows XP should log in by using a system administrator account (e.g. "Administrator").
2. Quit all other active applications until no applications are shown in the taskbar.
3. Load the enclosed CD-ROM into the CD-ROM drive. The installer starts up automatically.
4. The Setup screen appears.
Click the [Installing FinePixViewer] button.




5. After installation completed, press [Close] button.

B. Connect the Camera to your PC


1. Load an **xD-Picture Card** containing photographed images into your camera.
2. Press the "▶" button for about 1 second to turn the camera on in Playback mode.
Select "DSC" in "USB MODE" in the "SET-UP" menu (Refer to "USING THE SET-UP SCREEN" in the owner's manual).

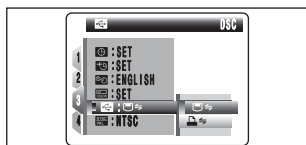

3. Turn your camera off.
4. Plug the USB cable (mini-B) into the USB socket of the terminal adapter.
5. Plug the AC power adapter connector into "DC IN 5V" socket of the terminal adapter and then plug the AC power adapter into the power outlet.
6. Turn your PC on.
7. Connect the terminal adapter to your PC using the USB cable (mini-B).

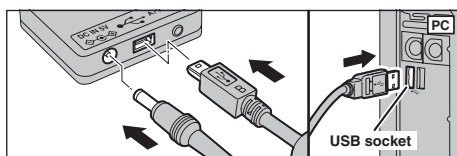

8. Plug the terminal adapter into the terminal adapter connection socket on the camera.
Press the "▶" button for about 1 second to turn the camera on in Playback mode.

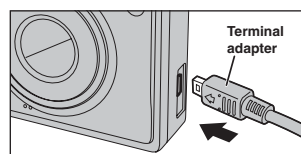

9. Windows 98/98 SE/Me/2000 Professional
FinePixViewer starts up automatically.

Windows XP

The "Found New Hardware" help message appears in the bottom-right corner of your screen. This message will close when the settings are completed. No action is required. FinePixViewer starts up automatically.



C. Save Images

1. The Save image Wizard starts up. Click the [Start] button.
2. Check that the files are downloaded from the camera to your PC and that a folder with the date is created.
Ex. \My Documents \ My Pictures \ 2005_0324

D. View Images

1. Click the [Show List of Images] button.



2. Select "Preview" in the View menu to display an enlarged image.

For more information

Refer to "How to use FinePixViewer" in the HELP menu, or chapter 5 and 6 in the Owner's Manual, or visit Fujifilm "Q&A Search" in the following website.

(<http://home.fujifilm.com/products/digital/>)

For Macintosh users, refer to chapter 5 and 6 in the Owner's Manual.